Maserati 2004 ~ 2016

Read / Clear Fault Codes, Data Stream, Service Reset, Adaptation For Some System

BA	RS	5	PRO	Ve	rsion:	20	21
		\sim	1110	• •	1 DIOII •		

AVAILABLE MODELS LIST

MODELS	CHASSIS TYPE
Ghibli	M157
GranTurismo	M145
Quattroporte	M139 / M139MY / M139EV07 / M156
GT	M138
Levante	M161

^{*}If the models are not listed here, users could select the related models.

Ghibli M157(2014-2016)

QUICK SERVICE

FUNCTION	ADAPTATION		
Oil Reset (CBS Reset)	√ (~2018)		
DPF Regeneration (Diesel Particulate Filter Regeneration /			
Replacement)	not support		
Fuel Injector Adaptation (Injector Rate Adjustment)	not support		
Brake Pad Service (Parking Brake)	V		
Battery Service (Register Battery Change)	not support		
TPS (Initialization Tire Pressure Monitoring)	not support		
	·		

115 (Initialization Tite 11es	sure monitoring)	nots	not support		
	READ / CLEAR				
SYSTEM	FAULT	DATA STREAM	ACTIVATION	ADAPTATION	
ENGINE	~	V			
ABS	v	V			
AIRBAGS	✓	~			
INSTRUMENT	~	~			
TRANSMISSION	✓	V			
BODY COMPUTER	✓	V			
ELECTRONIC PARKING					
BRAKE	~	v	/		
TIRE PRESSURE					
MONITOR	~	v			
ACTIVE DAMPING					
CONTROL	~	'			
ADAPTIVE FRONT					
LIGHTING	~	'			
ADAPTIVE CRUISE					
CONTROL	/	'			
AIR SUSPENSION					
CONTROL	/	'			
ALL WHEEL DRIVE	~	v			
ELECTRONIC LIMITED					
SLIP DIFFERENTIAL	~	v			
ELECTRONIC SHIFTER	✓	v			
PARKTRONICS	✓	V			
A/C	~	V			
TELEMATIC GATEWAY	/	V			
DRIVER DOOR MODULE	~	V			
PASSENGER DOOR					
MODULE	~	✓			

DOOR MODULE REAR								
LEFT	✓	~						
DOOR MODULE REAR								
RIGHT	✓	~						
MEMORY SEAT MODULE	✓	~						
POWER LIFT GATE								
MODULE	✓	~						
AMPLIFIER	~	~						
CEDIACE DECEM								
SERVICE RESET	/							
GranTurismo M145(2007~2016)								
QUICK SERVICE	,							
FUNCTION			ADA	DTATION				
				PTATION				
Oil Reset (CBS Reset)	4° 1.4 F94 . D		~					
DPF Regeneration (Diesel Pa	rticulate Filter Regene	eration /						
Replacement)	D	Δ.		upport				
Fuel Injector Adaptation (Inj	·	ιτ)	+	upport				
Brake Pad Service (Parking l			/					
Battery Service (Register Bat				upport				
TPS (Initialization Tire Press			not su	upport				
NCR (Gearbox Self Learning	,,		~					
	READ / CLEAR							
SYSTEM	FAULT	DATA STRE	CAM	ACTIVATION	ADAPTATION			
ENGINE OLD(ME)	~	~						
ENGINE NEW(CAN)	✓	~						
ABS / ESP	✓	~						
AIRBAG	✓	v						
GEARBOX	v	V						
ELECTRONIC BRAKE					Parking Brake			
SYSTEM	✓				Calibration			
AIR CONDITION	v	V						
NAVIGATION SYSTEM	V							
RADIO SYSTEM	✓							
BODY COMPUTER	<i>y</i>	v						
SUNROOF CONTROL								
MODULE	√	<u></u>						
LUGGAGE	•							
COMPARTMEMT NODE	V							
INSTRUMENT PANEL								
NODE	V	~						
DRIVER'S DOOR NODE	<i>V</i>							
HEADLIGHT SETUP								
MASTER ECU	~							
HEADLIGHT SETUP								
SLAVE ECU	~							
TIRE PRESSURE	V							
PARK SYSTEM	V							
SERVICE RESET Oughtwo ports M15	V SC(2012 2017)							
Quattroporte M15	00(2013~2016)							
QUICK SERVICE								
FUNCTION			ADA	PTATION				
Oil Reset (CBS Reset)			~					
DPF Regeneration (Diesel Pa	rticulate Filter Regene	eration /						
Replacement)			not su	upport				
Fuel Injector Adaptation (Inj	ector Rate Adjustmen	t)	not su	apport				
Brake Pad Service (Parking l	·		~					
rune 1 au pei vice (1 ai ning Di ane)								

Battery Service (Register Bat	not support				
TPS (Initialization Tire Press			not su	ipport	
	READ / CLEAR				
SYSTEM	FAULT	DATA STRE	AM	ACTIVATION	ADAPTATION
ENGINE	~	~			
ABS	✓	~			
AIRBAGS	✓	~			
INSTRUMENT	/	V			
TRANSMISSION	v	~			
BODY COMPUTER	v	V			
ELECTRONIC PARKING					
BRAKE	✓	~			
TIRE PRESSURE					
MONITOR	✓	✓			
ACTIVE DAMPING					
CONTROL	✓	V			
ADAPTIVE FRONT					
LIGHTING	✓	~			
ADAPTIVE CRUISE					
CONTROL	~	~			
AIR SUSPENSION					
CONTROL	~	~			
ALL WHEEL DRIVE	~	~			
ELECTRONIC LIMITED					
SLIP DIFFERENTIAL	✓	V			
ELECTRONIC SHIFTER	~	~			
PARKTRONICS	v	V			
A/C	✓	v			
TELEMATIC GATEWAY	<i>'</i>	<u></u>			
DRIVER DOOR MODULE	<u> </u>	<u> </u>			
PASSENGER DOOR					
MODULE	_	<u></u>			
DOOR MODULE REAR					
LEFT	~	<u></u>			
DOOR MODULE REAR		•			
RIGHT	~	~			
MEMORY SEAT MODULE		.,			
POWER LIFT GATE					
MODULE					
AMPLIFIER	V	<u> </u>			
SERVICE RESET	~				
	O MW(2002 2	017)			
Quattroporte M13	07 IVI I (200 3~ 2	στο)			
QUICK SERVICE					
FUNCTION			ADAPTATION		
Oil Reset (CBS Reset)			V		
DPF Regeneration (Diesel Pa	rticulate Filter Regene	eration /			
Replacement)	ge	-	not su	ipport	
Fuel Injector Adaptation (Inj	iector Rate Adiustmen	ıt)	_	ipport	
Brake Pad Service (Parking l		-7	V	11.	
Battery Service (Register Bat			-	ıpport	
TPS (Initialization Tire Press	<u> </u>			ipport ipport	
115 (Illualization Tire Press	READ / CLEAR	I	not st	ipport	
SYSTEM	FAULT	DATA STRE	АМТ	ACTIVATION	ADAPTATION
			// 1 /1	ACTIVATION	ADAI IATION
ENGINE OLD(ME)	<i>V</i>	<i>'</i>			
ENGINE NEW(CAN)	/	'			
GEARBOX					

TIRE PRESSURE	V					
PARK SYSTEM	✓					
ELECTRONIC BRAKE					Parking Brake	
SYSTEM	'				Calibration	
ABS / ESP	v	V				
AIRBAG	V					
BODY COMPUTER	~	~				
SUNROOF CONTROL						
MODULE	'	'				
LUGGAGE						
COMPARTMENT NODE	'					
INSTRUMENT PANEL						
NODE		/				
DRIVER'S DOOR NODE	V					
PASSENGER'S DOOR NODE						
	<i>y</i>					
HEADLIGHT SETUP ECU	<u> </u>	~				
NAVIGATION SYSTEM	<i>V</i>					
RADIO SYSTEM						
AIR CONDITION	V	~				
SERVICE RESET	✓					
Quattroporte M13	39EV07 (2007)					
QUICK SERVICE						
FUNCTION			ADA	PTATION		
Oil Reset (CBS Reset)			~			
DPF Regeneration (Diesel Pa	rticulate Filter Regene					
Donlogomont)						
Replacement)			not sı	ıpport		
Fuel Injector Adaptation (Inj		t)		apport apport		
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I	Brake)	t)	not su	upport		
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat	Brake) tery Change)		not su	ipport		
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I	Brake) tery Change) sure Monitoring)		not su	upport		
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press	Brake) tery Change) sure Monitoring) READ / CLEAR		not su not su not su	apport apport	A DA DE A TION	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	ipport	ADAPTATION	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport	ADAPTATION	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION		
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION		
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE DRIVER'S DOOR NODE	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE DRIVER'S DOOR NODE PASSENGER'S DOOR	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE DRIVER'S DOOR NODE PASSENGER'S DOOR	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE DRIVER'S DOOR NODE PASSENGER'S DOOR NODE HEADLIGHT SETUP ECU	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE DRIVER'S DOOR NODE PASSENGER'S DOOR NODE HEADLIGHT SETUP ECU NAVIGATION SYSTEM	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT V V V V V V V V V V V V V	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	
Fuel Injector Adaptation (Inj Brake Pad Service (Parking I Battery Service (Register Bat TPS (Initialization Tire Press SYSTEM ENGINE TRANSMISSION ELECTRONIC BRAKE SYSTEM ABS / ESP AIRBAG BODY COMPUTER NODO IMPERIALE LUGGAGE COMPARTMEMT NODE INSTRUMENT PANEL NODE DRIVER'S DOOR NODE PASSENGER'S DOOR NODE HEADLIGHT SETUP ECU NAVIGATION SYSTEM RADIO SYSTEM	Brake) tery Change) sure Monitoring) READ / CLEAR FAULT	DATA STRE	not su not su not su	apport apport apport ACTIVATION	Parking Brake	

Quattroporte M139(2003~2016)							
OUICK SERVICE							
FUNCTION			ADAPTATION				
Oil Reset (CBS Reset)			✓ ✓				
DPF Regeneration (Diesel Pa	rticulate Filter Regene	eration /	•				
Replacement)	- viculius I iist I itegeni		not support				
Fuel Injector Adaptation (Inj	ector Rate Adjustmen	not support					
Brake Pad Service (Parking	•	<u>, </u>	✓				
Battery Service (Register Bat			not support				
TPS (Initialization Tire Press	<u> </u>		not support not support				
	READ / CLEAR		not support				
SYSTEM	FAULT DATA STR			EAM ACTIVATION ADAPTATI			
ENGINE	✓	<u> </u>					
					Clutch self-		
					learning		
					Clutch		
A VITTO TIPO A VIGINA VIGINA VI					configuration		
AUTO TRANSMISSION	'	'			settings		
TIRE PRESSURE	V				D 1: D 1		
ELECTRONIC BRAKE					Parking Brake Calibration		
SYSTEM A DC / ESD					Calibration		
ABS / ESP	<i>'</i>	'					
AIRBAG	V						
DODY COMPUTED							
BODY COMPUTER	V	'					
SUNROOF CONTROL							
MODULE LUGGAGE	/	<i>'</i>					
COMPARTMEMT NODE							
INSTRUMENT PANEL							
NODE	~						
DRIVER'S DOOR NODE	V						
PASSENGER'S DOOR							
NODE	✓						
SUSPENSION CONTROL							
NODE	~						
HEADLIGHT SETUP ECU	v	v					
NAVIGATION SYSTEM	~						
RADIO SYSTEM	V						
AIR CONDITION	V	~					
SERVICE RESET	V						
GT M138(2001~20	016)						
QUICK SERVICE	/						
FUNCTION			ADA	PTATION			
Oil Reset (CBS Reset)			~				
DPF Regeneration (Diesel Pa	rticulate Filter Regene	eration /					
Replacement)	· ·		not su	apport			
Fuel Injector Adaptation (Inj	ector Rate Adjustmen	t)	not su	apport			
Brake Pad Service (Parking)	•		~	·			
Battery Service (Register Bat			not su	ıpport			
TPS (Initialization Tire Press				ıpport			
,	READ / CLEAR						
SYSTEM	FAULT	DATA STRE	AM	ACTIVATION	ADAPTATION		
ENGINE	v	~					

					Clutch self-
					learning
					Clutch
AUTO TRANSMISSION					configuration
(CFC201 First)	/	~			settings
					Clutch self-
					learning
					Clutch
AUTO TRANSMISSION					configuration
(CFC201 Second)	/	~			settings
ABS/ESP	✓	~			
SUPENSION MODULE)	/				
AIRBAG	V				
ISTRUMENT PANEL					
NODE	✓				
Levante M161(20)	17 - 2016)				
QUICK SERVICE					
FUNCTION			ADA	PTATION	
Oil Reset (CBS Reset)			'		
DPF Regeneration (Diesel Pa	rticulate Filter Regene	eration /			
Replacement)			not su	ıpport	
Fuel Injector Adaptation (In	jector Rate Adjustmen	ıt)		ıpport	
Brake Pad Service (Parking		,	'		
Battery Service (Register Bat			not si	apport	
TPS (Initialization Tire Press				apport	
115 (Initialization The Tress	READ / CLEAR		not st	фрон	
SYSTEM	FAULT	DATA STRE	AM	ACTIVATION	ADAPTATION
ENGINE	v THEET	V	22 8171	710117111011	TIDIN TITLE
ABS	<u> </u>	<u></u>			
ADS		<i>V</i>			
AIDDACC					
AIRBAGS	<i>V</i>	v			
INSTRUMENT	<i>'</i>	<i>'</i>			
INSTRUMENT TRANSMISSION	*	-			
INSTRUMENT TRANSMISSION BODY COMPUTER	<i>'</i>	<i>'</i>			
INSTRUMENT TRANSMISSION	v v	<i>V</i>			
INSTRUMENT TRANSMISSION BODY COMPUTER	v v	<i>V</i>		<i>V</i>	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE	v v	<i>V</i>		<i>V</i>	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR	v v	<i>V</i>		·	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING	v v	v v		·	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL	v v	v v		·	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT	v v	v v v		·	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING	v v	v v v			
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION				•	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL				•	
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C TELEMATIC GATEWAY					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C TELEMATIC GATEWAY DRIVER DOOR MODULE					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C TELEMATIC GATEWAY DRIVER DOOR MODULE PASSENGER DOOR					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C TELEMATIC GATEWAY DRIVER DOOR MODULE PASSENGER DOOR MODULE					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C TELEMATIC GATEWAY DRIVER DOOR MODULE PASSENGER DOOR MODULE DOOR MODULE REAR					
INSTRUMENT TRANSMISSION BODY COMPUTER ELECTRONIC PARKING BRAKE TIRE PRESSURE MONITOR ACTIVE DAMPING CONTROL ADAPTIVE FRONT LIGHTING ADAPTIVE CRUISE CONTROL AIR SUSPENSION CONTROL ALL WHEEL DRIVE ELECTRONIC LIMITED SLIP DIFFERENTIAL ELECTRONIC SHIFTER PARKTRONICS A/C TELEMATIC GATEWAY DRIVER DOOR MODULE PASSENGER DOOR MODULE					

DOOR MODULE REAR			
RIGHT	✓	✓	
MEMORY SEAT MODULE	✓	V	
POWER LIFT GATE			
MODULE	✓	✓	
AMPLIFIER	✓	/	
SERVICE RESET	V		